



Catalogues

Product installation instructions

Solar Light



Time
switch




Intelligent
light control




Wireless
remote control

Applicable model


VT-10W VT-100W
VT-25W VT-200W
VT-40W VT-300W
VT-60W

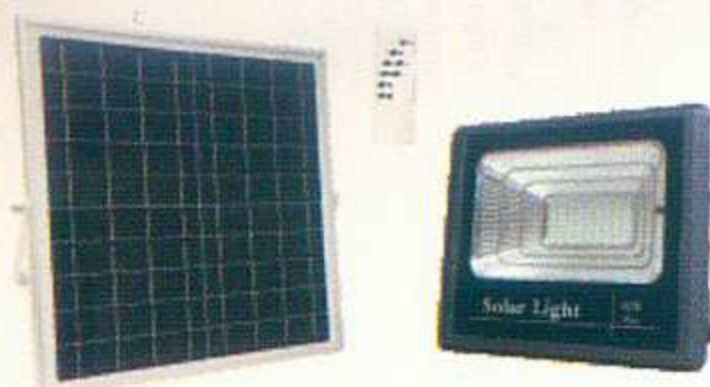

Remote control key instructions

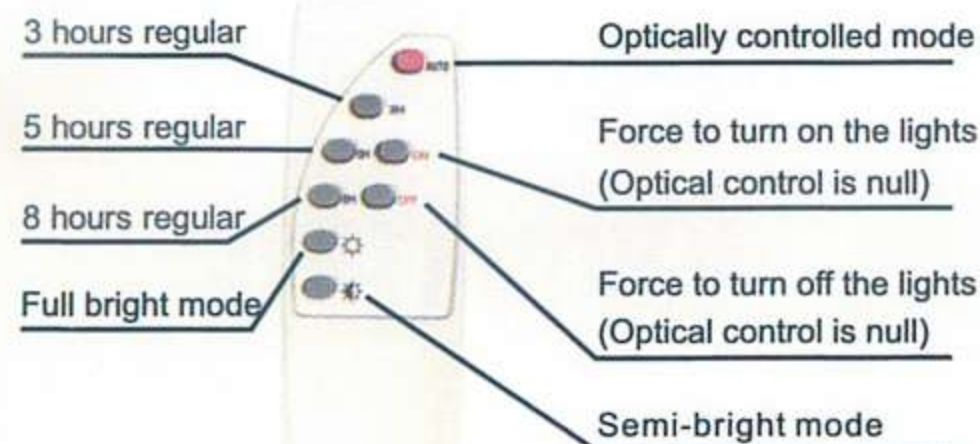

Installation Guide

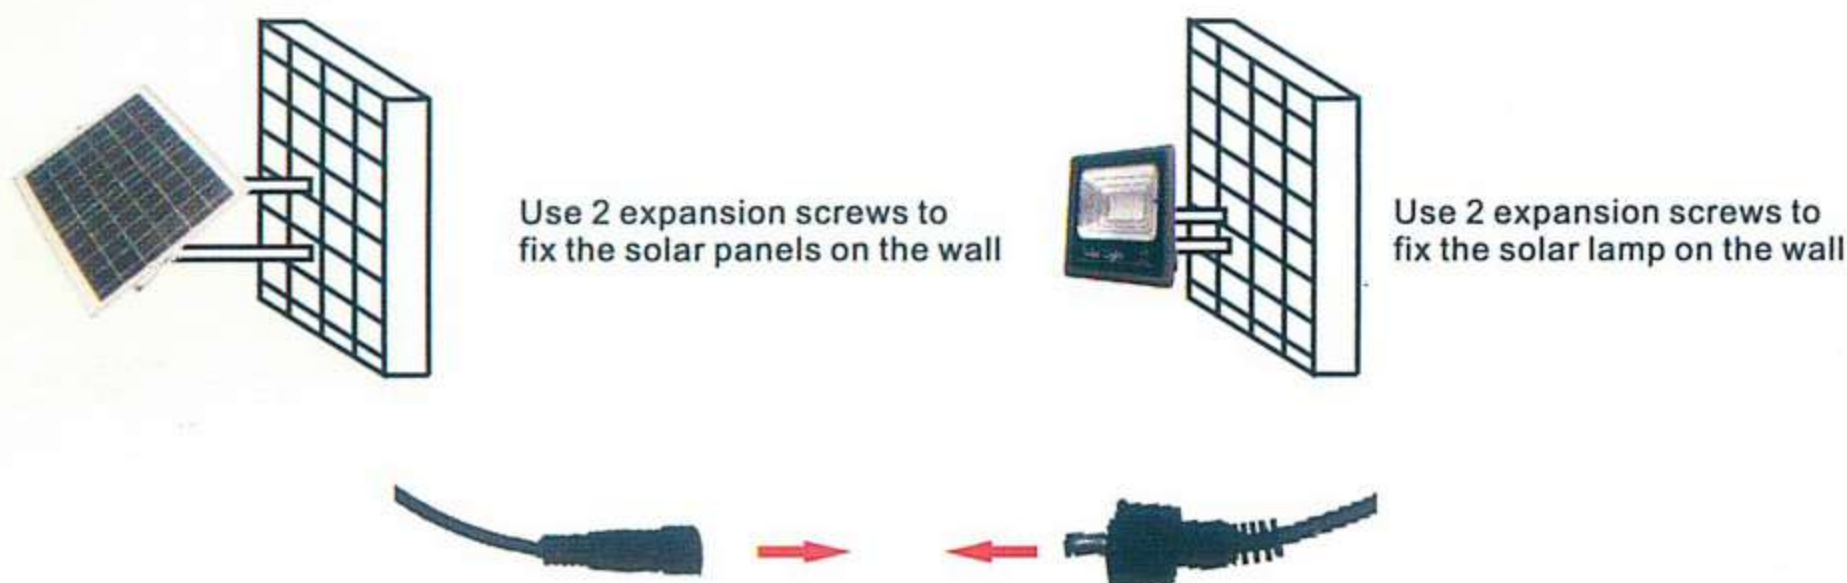

Plug the twist after the twist cap


Tips The battery must be fully charged before using 3-5 rainy days.

Installation Notes


1. Solar lights in the factory has been charged with electricity, you can normally light, please check the lights before installation Whether it is working properly;
2. The lamp and solar panels connected to the solar panel against the light, the light does not shine, unplug the connector light, Light sense normal;
3. On the front of the lamp, 5 meters above the lights by AUTO (red), the button lights flash 5 under the lights And remote control is normal;
Note: the remote control must be remote control receiver, or remote control is not sensitive remote control distance 8-15m;
4. A. the lamp with two inflated studs on the wall, as schematically;
B. The solar panel Angle adjusts according to the light intensity and time;
C. lamps can not be installed in low-lying areas, so as not to soak;
5. Plug the male and female plugs and tighten the waterproof cap and install it.
6. After installation check the installation is solid, use the remote control of the lamp to check;

Applicable model

VT-10W
VT-25W
VT-40W
VT-60W
VT-100W
VT-200W
VT-300W

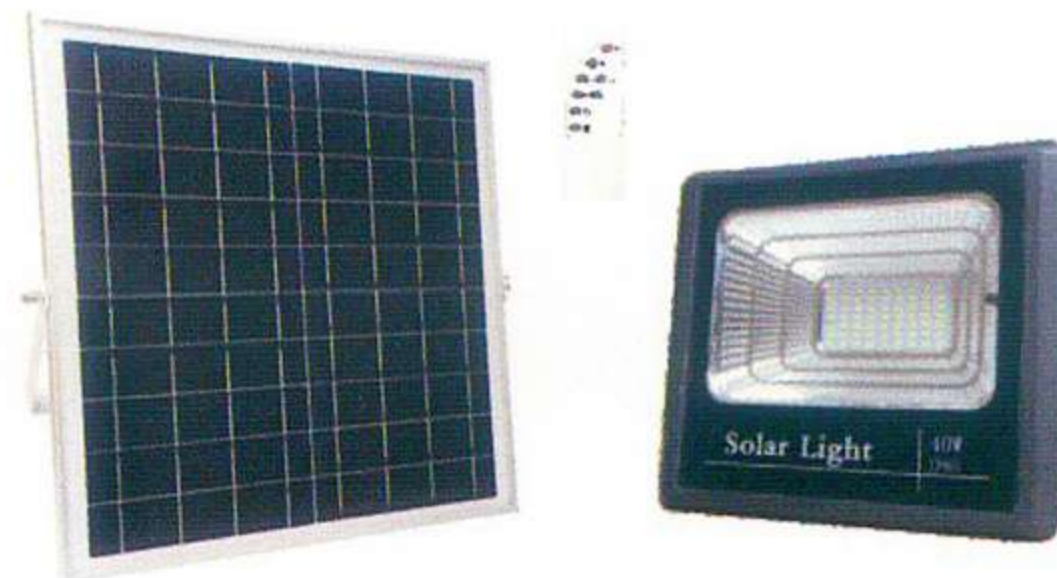

List

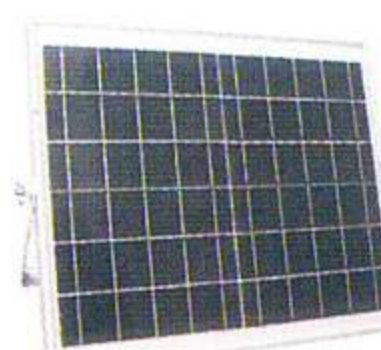1	 Solar panel	2	 Solar light
3	 Remote control	4	 expansion screw
5	 U-frame	6	 5m wire